 
 


Getting to know your phone

Front view

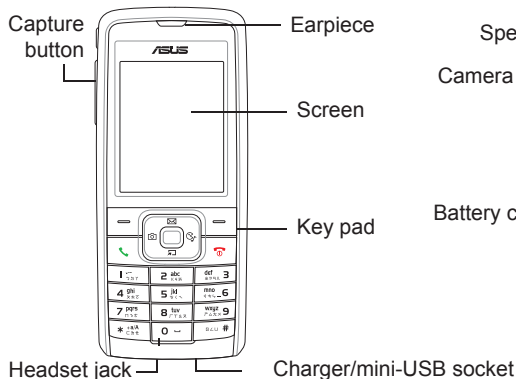

Rear view

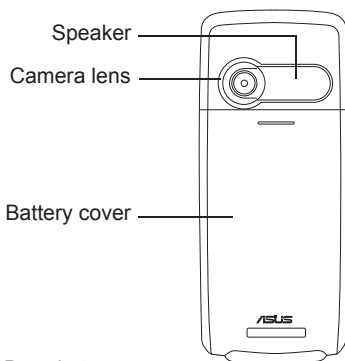

Power/end button: Hold to turn the phone on/off. Press to cancel or reject a call, or exit a menu/submenu.



Call key: Press to dial/ answer calls, and to redial the last number. Hold to display call logs.



Left soft key: Press to enter the **emome** Wap page and to select the function displayed at the bottom left of the screen.



 
Right soft key/clear: Press to view the phonebook when the phone is in standby mode. Press to select the function displayed on the bottom right corner of the screen.




Joystick key: Use to navigate around the menu system and press the Enter key (center button) to select a highlighted option.

Installing the SIM card and battery


1. Slide off the back cover.

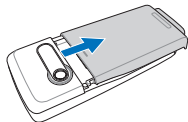

 2. Remove the battery.

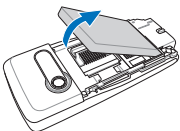


 3. Open the SIM card holder, then insert the SIM card.

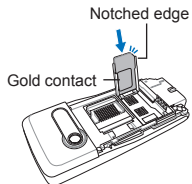


NOTE: The handset supports a miniSD™ card. Refer to the user manual for more details. In some regions the miniSD™ card may be supplied as an optional accessory.

 
4. Close and lock the SIM card holder back in place.

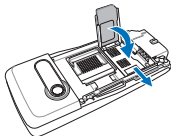

 5. Reinstall the battery and the battery cover.



 
6. Replace the back cover.



Charging the battery

1. Connect the charger plug to a power outlet.
2. Connect the charger to the socket at the bottom of the phone. The connector can only be inserted one way.

 NOTE: For best battery performance, allow the battery to charge and discharge completely the first few times you use it.

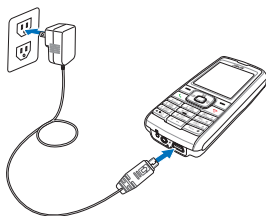

The Main Menu

The main menu screen is where you can access all the features and submenus of your cell phone. In standby mode, use the Enter key (center joystick) to enter the main menu, use the joystick key to scroll through the choices, and use the Enter key to select the highlighted option.



Network: Enables you to specify the WAP and data settings and set up GSM and GPRS settings. Enables access to the internet and STK SIM card services.



Messages: Allows you to access, write, send, receive, and organize text (SMS), multimedia (MMS), and email messages. You can also check email, chat, and broadcast a message using this menu.



Profiles: Enables you to select and customize the phone settings including the ring tone, volume, ring type, and answer mode.



Camera: Enables you to take pictures as well as record video with your phone. You can also access and organize all your pictures and videos from this menu item.



Calls: Stores information about calls made, received, and missed. You can also track call costs, SMS sent and received, and GPRS usage from this menu.



Settings: Lets you adjust phone settings, display settings, tone settings, call settings, network settings, and security settings. You can also restore all settings to their factory default from this menu.



Phonebook: Enables you to manage names and telephone numbers for easy access and caller recognition.




Media Center: Consists of an audio player, FM radio, games, and a melody composer.



Organizer: Contains useful tools such as an alarm, a calendar for scheduling appointments, a to-do-list, a stopwatch, a countdown function, and a calculator. You can also record memos, edit simple images, manage all your data using a file manager, convert units or currency, and manage your health.

Getting started

Turning on for the first time

To turn the phone on, press and hold the power button .

A welcome screen is displayed for a few seconds and the phone searches for a network before going into standby mode.

Standby mode


When the phone is turned on but you are not making or receiving a call or using any of the functions, the standby screen is displayed.

See your user manual for details of all the standby screen icons.



Locking and unlocking the keypad

To prevent accidental pressing of the keys on the keypad, your phone is equipped with a keypad lock facility.


The keypad locks automatically after a period of inactivity. To unlock the keypad, press the right soft key  and then the # key.


See your user manual for more details about how to use the keypad lock.


Making and receiving calls

Making a call

Enter the number you want to call using the numeric key pad.

To delete a number you entered by mistake, press the clear key .



To connect your call, press the call key .

To end your call, press the power/end key .



To make an international call:

1. Enter + by holding down the * key.
2. Enter the telephone number.



To make a call from phonebook:

1. In standby mode, press the right soft key  to open the phonebook.
2. Select a contact from the list using the joystick.
3. Press the call key  to connect the call.

To make a call from call logs:

1. In standby mode, press the call key  to load the call logs.
2. Select a phone number or contact entry.
3. Press the call key  to connect the call.

Receiving a call

1. When the phone rings, press the send/answer key  to answer the call.
2. Press the power/end key  to reject or end the call.

Volume

To adjust the volume during a call, use the volume key on the side of the phone to increase and decrease the volume.



Common settings

To set the date and time

Use the Date/Time menu to set the time, date, time zone and date format. The Date/Time menu can be accessed from the **Settings** menu:

Settings > Phone Settings > Date/Time

To set the menu language

The menus can be displayed in several different languages. Change the language setting in **Settings** menu:

Settings > Phone Settings > Language

To set the profile

You may use the Profiles menu to set how your phone sounds and acts. To set a profile, enter the Profiles menu and select the profile by pressing the center joystick. You can also customize each profile setting by selecting:

Profiles > Options > Personalize

To set the ringtone

To change a ringtone you must personalize the profile that you are using. For instance, if you are using the **Normal** profile, you must change the ringtone in **Normal** profile.

Personalize the current profile using the **Profiles** menu.

Profiles > Options > Personalize > Tone Settings

SMS and MMS messages

To compose text messages (SMS)

You can use your phone to send SMS text messages.

To Compose a text message: From the Message menu, select

Messages > SMS > Write Message

Enter text using the alphanumeric keypad.

To choose the text input method, select

Options > Input Method

and choose from the list. See your manual for more details.

To compose multimedia messages (MMS)

To Compose an MMS message, select Edit MMS from the Messages menu.

Messages > MMS > Edit MMS

See the User Manual for more details on how to add text, image, and audio to your MMS.


Sending your message

When your message is complete:

1. Select:
Options > Done
2. For SMS messages, enter a phone number, or select one from the phonebook.
3. For MMS messages, enter a phone number or e-mail address in the appropriate field or use the **Edit** menu. You can also enter a subject line.

Using the camera, MP3 player and FM radio

Taking a picture or video


1. To take a picture or video, select **Camera** from the main menu or use the left joystick key  in standby mode.
2. Press the Capture button to take the picture or start/stop recording video. The picture will appear on the screen.

3. Select **Save** to save the photo in your album.

The capture button is the small key on the side of the cell phone. You can also use the center joystick key.

You can adjust camera settings by selecting **Options** when the camera is activated. See your user manual for more details.

Listening to MP3s

1. From the main menu, select **Media Center > Audio Player**
The audio player opens.
2. Press the up joystick key  to select **List** and display a list of available digital music files.

NOTE: Select **Options > Settings** to choose the location of the file to play.

3. Highlight a music file to play and press the Enter key to select it.
4. The Enter key and the up, down, right, left joystick keys act as play controls. When you push a key, the corresponding onscreen symbol lights up. Refer to the user manual for the key assignments.

Listening to the radio

To start the radio:

1. From the main menu, select **FM Radio** from the **Media Center** menu.
The FM radio opens.

NOTE: You must plug in the earphones and press the button on the microphone module for the FM radio to work.

2. To tune the radio, use the left and right joystick keys.
3. To control the volume, use the volume key on the side of the phone.
4. To turn the radio on and off, use the down joystick key.
5. To search for stations, use the up joystick key.